

 
 
正面

尺寸：220*180mm,风琴2折再对折后73*90mm 128g铜板纸

黑白双面

反面

4组通道计时器说明书(166)

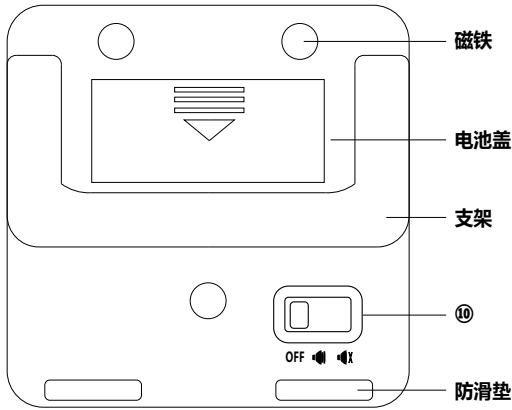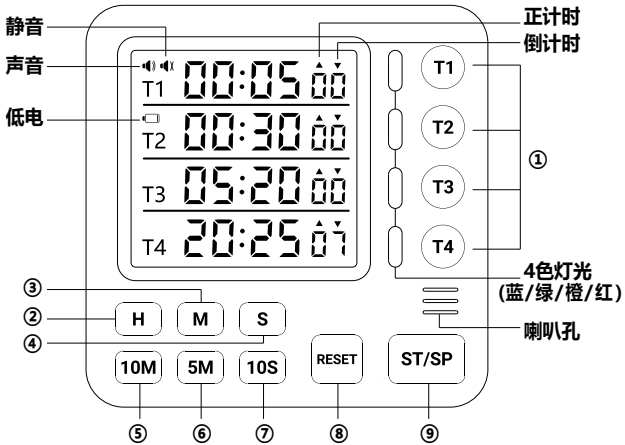

按键说明

- ①. **T1/T2/T3/T4**: 组别选择键, 从上到下分别对应 **T1**、**T2**、**T3**、**T4** 四组计时, 按下对应按键可选择相应组别
- ②. **H**: 设置小时, 短按一次数值增加 1, 长按可快速增加数值
- ③. **M**: 设置分钟, 短按一次数值增加 1, 长按可快速增加数值
- ④. **S**: 设置秒钟, 短按一次数值增加 1, 长按可快速增加数值
- ⑤. **10M**: 设置 10 分钟, 短按一次增加 10 分钟, 长按可快速增加数值
- ⑥. **5M**: 设置 5 分钟, 短按一次增加 5 分钟, 长按可快速增加数值
- ⑦. **10S**: 设置 10 秒钟, 短按一次增加 10 秒钟, 长按可快速增加数值
- ⑧. **RESET**: 在暂停状态, 短按可复位上次设置时间, 再按一次则清零数值
- ⑨. **ST/SP**: 开始/暂停计时
- ⑩. **三挡拨动开关 (OFF/🔊/🔇)**: 从左到右分别对应关机 / 声音 / 静音功能

功能介绍

- **四组计时**: 支持 (**T1/T2/T3/T4**) 四组独立计时, 可分别进行正计时或倒计时, 各组之间互不影响。
- **正计时**: 1秒-----99小时59分钟59秒计时范围。
- **倒计时**: 1秒-----99小时59分钟59秒计时范围。
- **声音开关**: 通过背面拨动开关调节, 中间档位为开启声音, 右边档位为静音, 选择后屏幕左上角会有对应符号点亮。
- **4色闪光灯提醒**: 四组时间分别对应 **蓝、绿、橙、红** 4种不同颜色的灯, 时间结束时会自动提醒。
- **关机功能**: 将背面拨动开关拨到最左边, 计时器即可关机。
- **低电显示**: 当屏幕左边出现相应提示时, 表示需要更换电池。

操作方法

●正计时

按 **T1/T2/T3/T4** 键选择其中一组计时(屏幕左边对应 **T** 符号出现), 在计时清零状态下, 按 **ST/SP** 键开始正计时 (计时过程中对应组符号 **▲** 显示); 计时过程中按 **ST/SP** 键可暂停, 暂停状态下再按 **ST/SP** 键可继续计时; 在暂停状态下, 按 **RESET** 键可清零

●倒计时

按 **T1/T2/T3/T4** 键选择其中一组计时(屏幕左边对应 **T** 符号出现), 在计时暂停或清零状态下, 按 **H**、**M**、**S**、**10M**、**5M**、**10S** 键设置时间 (长按可快速增加数值), 设置完成后, 按 **ST/SP** 键开始倒计时 (计时过程中对应组符号 **▼** 显示); 计时过程中按 **ST/SP** 键可暂停, 暂停状态下再按 **ST/SP** 键可继续计时; 在暂停状态下, 按 **RESET** 键可复位到上次设置时间, 再按一次 **RESET** 键则数值清零。



●倒计时提醒

当倒计时结束后, 自动进入正计时并发出提醒。若不按 **ST/SP** 键, 提醒会持续 1 分钟; 若按 **ST/SP** 键, 提醒会立即停止, 数值也会停止闪动并恢复至上次设置时间。

注意事项

当计时器显示 **🔋** 低电池图标时, 请使用2节AAA 7号电池更换。
为保证产品正常使用, 请勿放置于高温、潮湿以及油烟环境。

Four channel timer manual

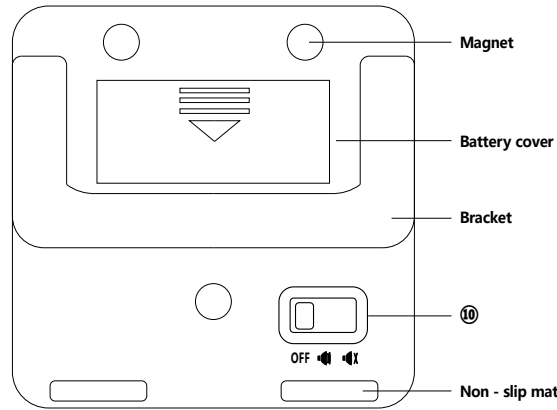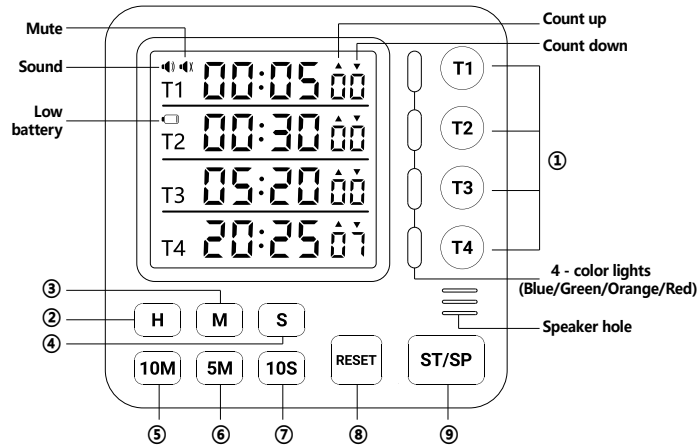

Button Description

- ①. **T1/T2/T3/T4**: Group selection key, corresponding to **T1**, **T2**, **T3**, **T4** timing groups from top to bottom. Press the corresponding button to select the corresponding group.
- ②. **H**: Set the hour, short press once to increase the value by 1, long press to quickly increase the value
- ③. **M**: Set minutes, short press once to increase the value by 1, long press to quickly increase the value.
- ④. **S**: Set seconds, short press once to increase the value by 1, long press to quickly increase the value.
- ⑤. **10M**: Set 10 minutes, short press once to increase 10 minutes, long press to quickly increase the value.
- ⑥. **5M**: Set 5 minutes, short press once to increase 5 minutes, long press to quickly increase the value.
- ⑦. **10S**: Set for 10 seconds, short press to increase by 10 seconds, long press to quickly increase the value.
- ⑧. **RESET**: In pause mode, short press to reset the last set time, press again to reset the value to zero.
- ⑨. **ST/SP**: Start/Stop Timing
- ⑩. **3-position toggle switch (OFF/🔊/🔇)**: corresponding to shutdown/sound/mute functions from left to right.

Function Introduction

- **Four Groups Timer**: Supports independent timing for (**T1/T2/T3/T4**) four sets, which can be counted up or down separately without affecting each other.
- **Count Up**: 1 second ---99 hours 59 minutes 59 seconds timing range.
- **Countdown**: 1 second ---99 hours 59 minutes 59 seconds timing range.
- **Sound switch**: Adjust by flipping the switch on the back. The middle gear is to turn on the sound, and the right gear is to mute. After selection, the corresponding symbol will light up in the upper left corner of the screen.
- **Four color flashing reminder**: Four sets of time correspond to four different colors of lights: **blue, green, orange, and red**. The flashing reminder will be displayed at the end of the time.
- **Shutdown function**: Turn the toggle switch on the back to the far left, and the timer will shut down.
- **Low battery display**: When a corresponding prompt appears on the left side of the screen, it indicates that the battery needs to be replaced.

Operation method

● Count Up

Press **T1/T2/T3/T4** to switch to the timer **T1/T2/T3/T4** you want. In the timer reset state, press the **ST/SP** key to start counting (the corresponding group symbol **▲** is displayed during the timing process); Press the **ST/SP** key during the timing process to pause, and press the **ST/SP** key again in the paused state to continue timing; In pause mode, press the **RESET** key to reset to zero

● Countdown

Press **T1/T2/T3/T4** to switch to the desired timer **T1/T2/T3/T4**. While the timer is paused or reset, press the **H**, **M**, **S**, **10M**, **5M**, and **10S** keys to set the time (long press to quickly increase the value). After setting, press the **ST/SP** key to start the countdown (the corresponding group symbol **▼** is displayed during the timing process); Press the **ST/SP** key during the timing process to pause, and press the **ST/SP** key again in the paused state to continue timing; In the paused state, press the **RESET** button to reset to the last set time, and press the **RESET** button again to reset the value to zero.

● Countdown reminder

When the countdown ends, it automatically switches to count-up mode and issues a reminder. If you do not press the **ST/SP** button, the reminder will continue for 1 minute. If you press the **ST/SP** button, the reminder will stop immediately, the corresponding timer will also stop flashing and return to the last set time.

Attention

When the timer displays **🔋** the low battery icon, please replace it with 2 AAA batteries. To ensure the normal use of the product, please do not place it in high temperature, humidity, or oil fume environments.